

## 5720-17 AIR INLET VALVE

<u>PART NUMBER</u>	<u>KEY</u>	<u>DESCRIPTION</u>
5777	(5)	Spring Retainer
5778	(6)	Valve Cover
5779	(7)	Hexhead Bolts (6) 3/8"-16 x 4", each
5706	(7)	Hex Nuts (6) 3/8-16, each
5780	(8)	Valve Spring
5781	(9)	Spring Bolt with Nut
5782	(10)	Spring Washer
5712	(11)	Diaphragm (2), each
5784	(13)	Threaded Washer
5785	(14)	Center Spacer
5786	(15)	Spacer Piston
5787	(16)	Piston Guide
5788	(17)	Guide O-Ring
5789	(18)	Piston O-Ring
5710	(19)	Ball and Stem Nut
5791	(20)	Ball and Stem
5715	(21)	Valve Seat
5717	(22)	Valve Body
5793	(24)	1" x 1/4" Bushing
5775	(25)	Spring Tensioner

5790-B

Spring Assembly includes (5,8,9,10,11,13,25)

